

INSTRUCTIONS FOR UNPACKING THE R80 LOUDSPEAKERS

Move the crate to an area where it can be carefully unpacked.

Remove the shrink wrap and cut the nylon straps using scissors or craft knife.

The crate can be disassembled by hand with 5 easily removable panel sections.

Loosen and remove all 4 of the uppermost corner brackets.

Carefully lift off and remove the top panel.

Loosen and remove the 4 visible corner brackets from the crate.

Remove the 2 end panels. Remove the 2 side panels.

Remove the top foam.

Place a towel on the floor.

Carefully raise the loudspeaker to its upright position and stand it upright on the towel.


Remove the protective fabric shipping bag from the cabinet.

The plinth is packed beneath the cabinet. Remove the R80 plinth.

Inside the void of the plinth is an accessory box which contains 8 spikes and nuts, 8 floor protectors and 2 spanners. One spanner is for adjusting the height and one is for the locking nut.

Retain the packaging if possible and store in a cool dry place for potential future use.

R80

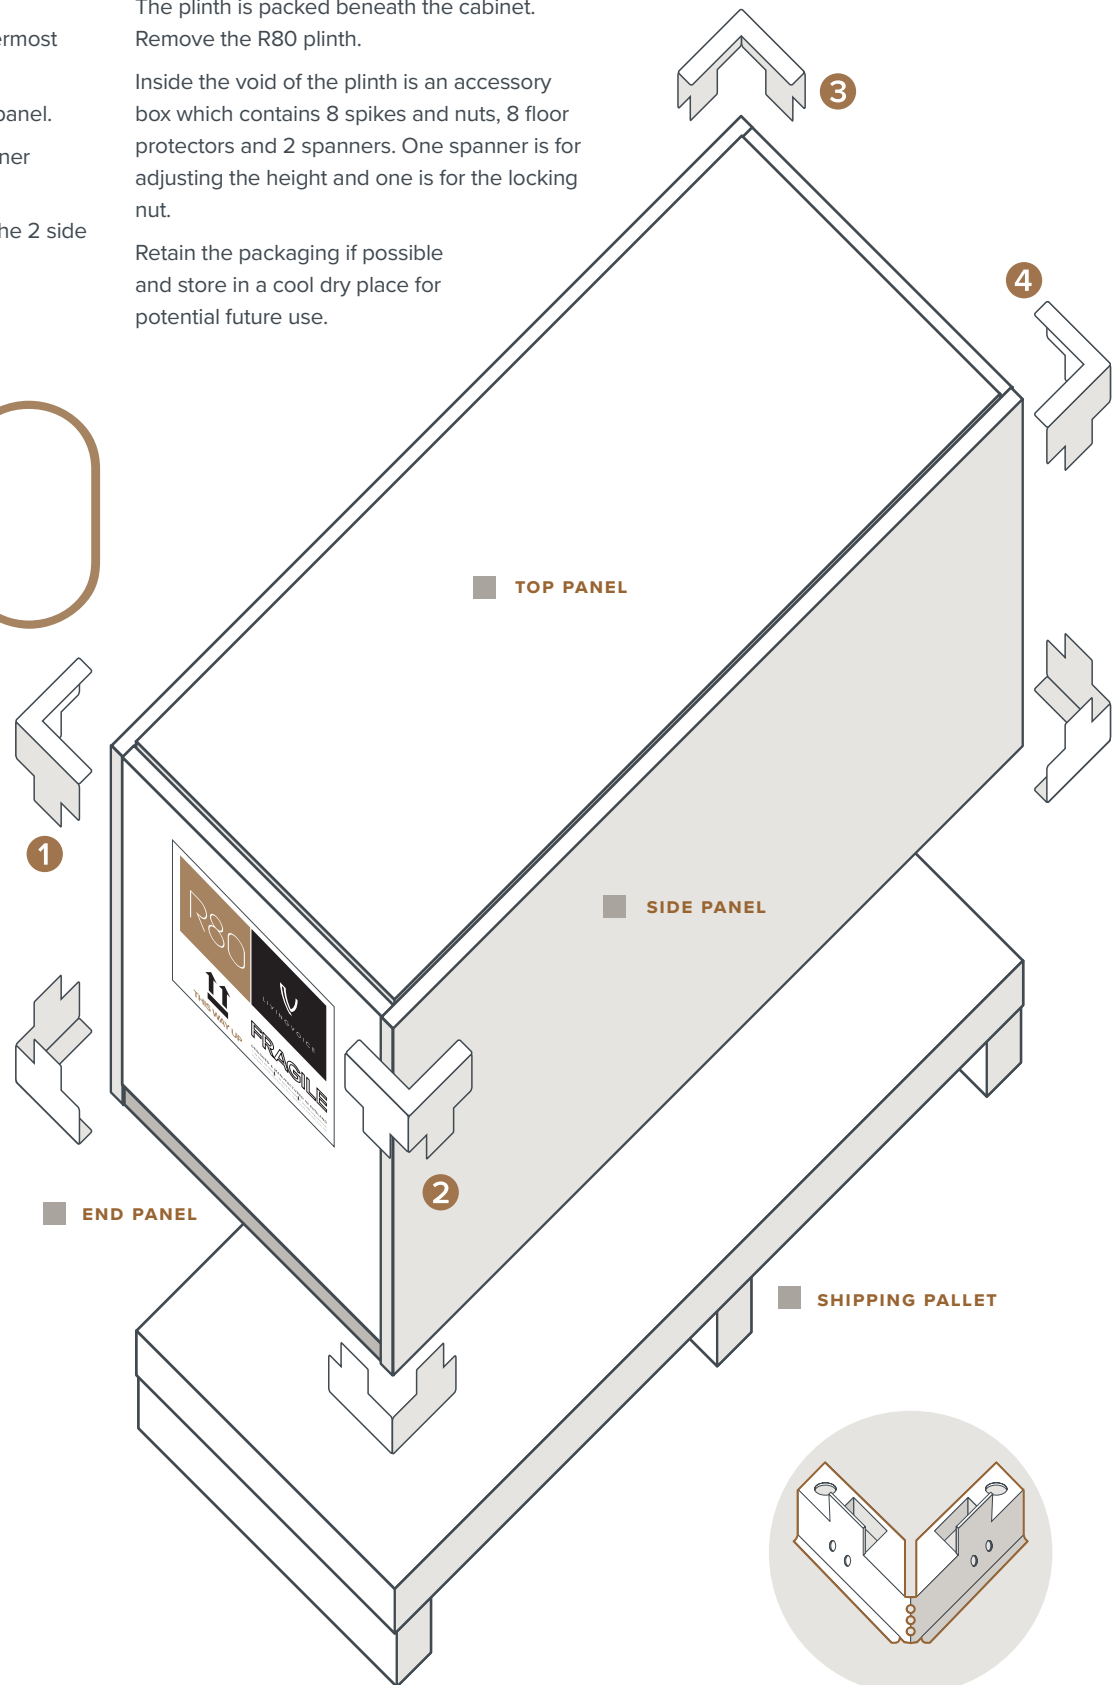

NB. Two people are required to lift the cabinet from the crate.

■ TOP FOAM ASSEMBLY

■ R80 IN FABRIC WRAP

■ PLINTH & ACCESSORIES

The plinth and a box containing spikes, floor protectors, adjustment spanners etc are located in the tray underneath the speaker cabinet.

